

Robert DiLutis Reed Clipper Instructions

Included in Case: Reed Clipper, Traditional Tip Shape, Tip 2 Shape, extra blade, bumper and 2 Allen wrenches

Clipping Reed

Step 1:

Back out the 2 reed adjustment screws on right side of clipper until screws do not protrude into center of clipper

Step 2:

Lift Cutting Arm to perpendicular position

Step 3:

Slide reed under cutting arm until the tip touches front bar of clipper

Step 4:

Place left thumb in groove on left side of clipper and apply gentle pressure to the reed against right side of clipper screws.

Step 5:

Turn adjustment screws in and center reed in channel. Bottom screw should protrude further into clipper to allow for reed taper. Top screw will help center tip.

Step 6:

Lower Cutting Arm slowly, looking through clear blade clamp. Make any final adjustment using the adjustment screws to align tip.

Step 7:

When you are confident that you have centered the reed press the blade and clip the reed

Tips:

Use old reeds to practice until you get the feel for the clipper

For less reed removal put back on heel of the reed gently

Be sure the rear adjustment screw is in further than the front screw

Replacing Blade: Always wear safety glasses and gloves when working with sharp tools

Using smallest hex wrench remove front screws, alternating one turn each until removed. With small pliers remove blade. Replace plastic clamp to clipper turning screws in only one turn. Press arm down to rubber pad. Slide blade between until flush with top of clamp. Alternate one turn each and re-clamp blade.